

COUPLING KIT REPLACEMENT M series PP Pump Tube

1) Remove lower rotor pump foot (0343-307) or impeller pump foot (0343-308) by holding pump tube in place at lower bearing housing (0343-302) then twist pump foot right while pulling away from pump. This will release it from notch that holds it in place.

2) Then hold rotor (0343-305) or impeller (0343-306) in place with gloves on or with a rag and turn coupling kit (0201-004) to the left to remove. During the step one of two things will happen, the coupling kit will come loose or the rotor will! If the rotor comes loose then hold drive shaft with a pair of pliers near where rotor came off being careful not to make contact with the threads and turn the coupling again to the left to remove.